



ATTENTION

1. VERIFIER LE NIVEAU D'HUILE LEGEREMENT LA SURFACE  
 2. COMPLETER LA FIXATION EN SERRANT  
 L'EXEMPLE: ①-②-③-④-⑤-⑥-⑦-⑧-⑨-⑩-⑪-⑫  
 DE 12-16Nm QUAND ET SI LA SURFACE  
 3. METTRE EN MARCHE LE MOTEUR ET  
 LE JOINT D'ETANCHERITE  
 4. SE CONFORMER AUX INSTRUCTIONS DU  
 D'ENTRETIEN QUANT A L'INTERVALLE DE

CAUTION

2

3

DO NOT ADD OIL TO THE  
 ENGINE UNTIL THE SEALING  
 FACE OF THE GASKET IS  
 TIGHTENED UNTIL THE SEALING  
 TORQUE (EX ①-②-③-④-⑤-⑥-⑦-⑧-⑨-⑩-⑪-⑫)  
 IS REACHED AND CHECK FOR OIL  
 LEAKS AT THE CHANGE INTERVAL

